

EXHIBIT CN

Locate firmware version & settings

Firmware is the software installed on Google Nest or Home speaker or display. When a firmware update is available, your device will automatically download the update via an Over-the-Air (OTA) update.

Your speaker or display must be set up and connected to the internet to receive the firmware update.

Find the current firmware version

[Android](#) [iPhone & iPad](#)

To check which firmware version you're on, follow these steps:

1. Make sure your mobile device or tablet is [linked to the same account](#) as your speaker or display.
2. Open the Google Home app.
3. Select your device.
4. At the top right, tap Settings > Device information.
5. Under "Technical information," find **Cast firmware**: X.XXX.XXXXX.

Give feedback about this article

Was this helpful?

Yes

No

Need more help?

Try these next steps:



Ask the Help Community

Get answers from community experts



Contact us

Tell us more and we'll help you get there

Change Google Nest device settings

- Ambient EQ of your Google Nest display
- Change the device name
- Change the home address
- Change the language of your Google Assistant
- Turn Nest displays notifications on or off
- Change volume of alarms and timers
- Turn Do not disturb on or off
- Manage volume and LED brightness with Night mode
- Locate firmware version & settings**
- Get sound after you say "Hey Google"
- Wall mount your Google Nest Mini
- Change your sound settings
- How to correct group playback delay
- Google Nest display accessibility settings
- Dark theme for Nest displays

